

Jack Jumper® Cutout Bypass Tool



USJJ-004 15 kV Cutout Bypass Tool
USJJ-009 27 kV Cutout Bypass Tool




For use on ABB® Polymer
& Porcelain Loadbreak Cutouts

Product Description

The Jack Jumper® Cutout Bypass Tool permits a safe and quick method to bypass an overhead cutout without the tedious use of bulky jumper cables. The tool is indispensable for fuse coordination tasks and permits easy bypass of an underground dip. The Jack Jumper® Cutout Bypass Tool saves time and money, eliminates risk of service interruption and prevents accidental cross phasing.

The primary purpose of the Jack Jumper® Cutout Bypass Tool is to temporarily bypass a cutout fuse door during fuse coordination. The Jack Jumper® Cutout Bypass Tool is rated at 100 Amps continuous AC current without exceeding a 40°C temperature rise.

Installation and removal of the Jack Jumper® Cutout Bypass Tool is done with a shotgun stick.

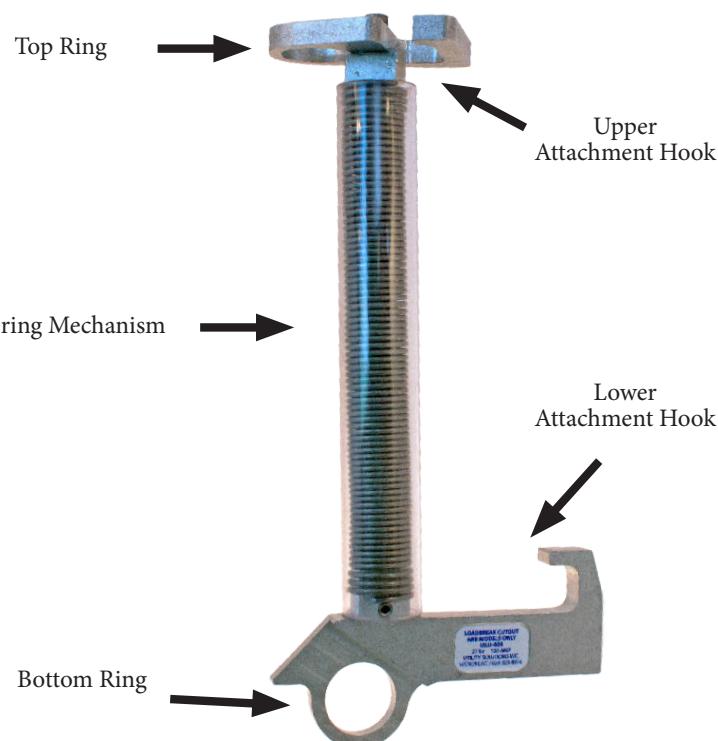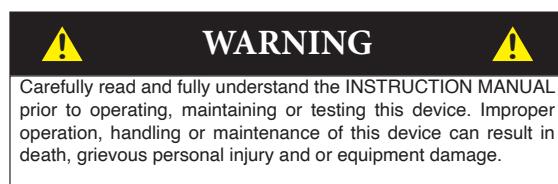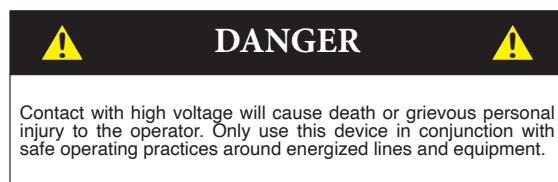

Safety Procedures

Follow all basic and necessary procedures to secure the electrical site before beginning work. Follow all existing codes, requirements and instructions for all equipment used in conjunction with the Jack Jumper® Cutout Bypass Tool. Inspect the cutout carefully for damage or corrosion. Use standard electrical procedures to clean the connection points prior to utilizing the Jack Jumper® Cutout Bypass Tool.

Inspect the porcelain for any damage or cracks. If either condition is found, do not use the Jack Jumper® Cutout Bypass Tool.



WARNING



Only install the Jack Jumper® Cutout Bypass Tool with the use of an insulated shotgun stick. When attaching or detaching the Jack Jumper® Cutout Bypass Tool do not use abrupt or rough movements, be gentle and do not hurry.



WARNING



If you are servicing a fuse, replace the fuse as quickly as possible. The fuse is a protective device. The Jack Jumper® Cutout Bypass Tool **DOES NOT FUNCTION AS A FUSE**. If you must leave the area, replace any fuses and remove the Jack Jumper® Cutout Bypass Tool. It is not a fuse replacement or permanent bypass mechanism.

Trouble Shooting


If the Jack Jumper® Cutout Bypass Tool appears to be malfunctioning do not attempt to repair it. Immediately remove it from service, tag it as defective, note the specific problem, and return it to Utility Solutions for inspection. Any disassembly will invalidate any and all product guarantees, claims and warranties.

Inspection

The Jack Jumper® Cutout Bypass Tool should be stretched slightly and visually inspected prior to utilization to ensure that the copper coil is not frayed or separated. If fraying or separation of the copper coil has occurred do not utilize the tool.


Installation

1. Do not install the Jack Jumper® Cutout Bypass Tool on an open cutout.
2. Using an appropriately rated and approved insulated shotgun stick, attach and lock the bottom ring of the Jack Jumper® Cutout Bypass Tool so it extends straight out from the stick with the bottom attachment hook facing away.
3. Approach the cutout on the side with of the plastic arcing bridge (Figure A).
4. Hang the upper attachment hook. Ensure the "hook" portion extends around the entire bracket (Figure A).
5. Pull down to install the bottom attachment hook. Ensure the "hook" portion extends around the entire lower fuse door (Figure B).
6. Be sure the Jack Jumper® Cutout Bypass Tool is secure and will not interfere with removal of the fuse door.
7. Release the Jack Jumper® Cutout Bypass Tool from the shotgun stick. The fuse door may now be opened temporarily as necessary.

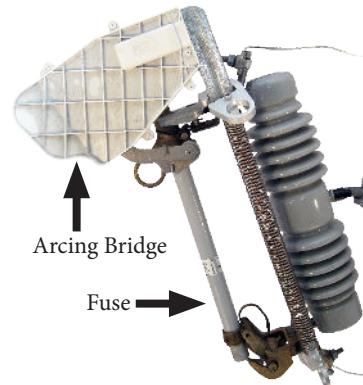

Removal and Storage

1. Do not remove the Jack Jumper® Cutout Bypass Tool from an open cutout.
2. Attach and lock the bottom ring of the Jack Jumper® Cutout Bypass Tool to a shotgun stick.
3. Pull down to remove the lower attachment hook (Figure B).
4. Carefully remove the Jack Jumper® Cutout Bypass Tool until the upper attachment hook is free. Maintain proper distance from any adjacent energized equipment.
5. It is recommend to store the Jack Jumper® Cutout Bypass Tool in a soft case.

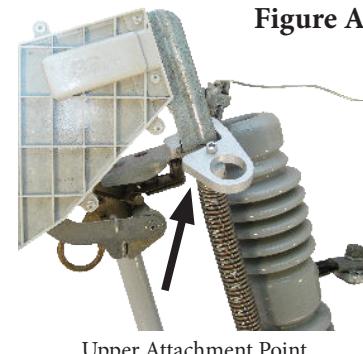

Maintenance

The Jack Jumper® Cutout Bypass Tool is designed to withstand usual operational usage. Proper care and handling will increase the longevity of service. Periodically inspect the Jack Jumper® Cutout Bypass Tool for corrosion and copper coil fraying/separation. The Jack Jumper® Cutout Bypass Tool is sold as a complete unit. Any maintenance, disassembly or misuse voids any and all warranties, guarantees, or liability.

Warranty

Utility Solutions warrants the Jack Jumper® Cutout Bypass Tool for any defects in manufacturing for the period of one year. If the tool is returned within that time period, Utility Solutions will replace the tool free of charge. No warranty is made if spring is overextended.

Figure B

